



STEP-UP ISOLATING PORTABLE TRANSFORMERS SAFETY INSTRUCTIONS Manufactured to BSEN 61558

Scan to
find out
more



1. Read all of these instructions before you use the transformer.
2. These transformers are designed to provide mains isolation.
3. Check the transformer case, plug and cable for signs of damage before use. Do not use if any damage is discovered
4. Check the transformer rating against the power usage of the tool you are going to use.
5. These transformers are rated for intermittent operation at their maximum listed power capability for a duty cycle of 25%. i.e. 5 minutes "ON" 15 minutes " OFF".
6. These transformers may be used in a continuous operation mode at a rating of 50% of their maximum capability. e.g. a 3.3kVA unit may be operated continuously at 1.65kVA.
7. During normal operation these units will become warm. Ensure the transformer will not damage any floor covering it is standing on. It is not advisable to stand the unit on carpets, vinyl floor covering etc.
8. This unit is fitted with a thermal trip device to protect against overload and short circuit.
9. In the event of a short circuit to the output remove the cause of the fault before pressing the reset button on the thermal trip.
10. In the event of an overload trip allow the unit to cool for at least 15 minutes before pressing the reset button.
11. These units are fitted with a BS EN 60309 industrial style input plugs and mains lead. The earth on the input plug must always be connected for complete safety to the output.
12. These units are Class 1 insulated and must not be tested on Portable Appliance Testers (PAT) as Class 2 double insulated products. Flash test only at 1.5kV.
13. Transformers have an inherent high in-rush current at switch on. In the event of a fuse blowing check that the replacement is a suitably rated anti-surge type. Miniature Circuit Breakers (MCB's) protecting sockets should have a type C or D tripping characteristic.
14. These units are protected against the ingress of solid and liquid contaminants to IP44.
15. If the external flexible cable or cord of this transformer is damaged, it shall be replaced by the manufacturer or their service agent, or a similarly qualified person in order to avoid hazard.
16. In the event of changing the input plug for connection to an alternative type of mains supply socket adopt the following wiring convention.

Live Brown Wire
Neutral Blue Wire
Earth Green / Yellow Wire

Ensure that such wiring is carried out by suitably qualified personnel

Tel: 01494 715472

Email: sales@ces-hire.com

Follow us  twitter.com/CES_Hire

 www.facebook.com/CESHireWycombe

CES HIRE Limited Unit F Lincoln Road Cressex Business Park High Wycombe Bucks HP12 3RH

Visit our website for special offers and other products - www.ces-hire.com